

CaterRent

Food Service Equipment Rental & Sales

260 North 24th Avenue, Minneapolis, MN 55411-2236

Phone: 612-588-1188 Technician: 612-436-1499



Step 2



Step 3

Sink, Portable 3+1 Hand Sink #SINK05

With 12" divider to protect from hand sink splashing into 3 compartment area

How to use and maintain the sink:

1. Plug the sink in to a 15 amp, 120 volt circuit. The water heater and pump require electricity.
2. To fill and empty water tanks: remove the FRONT left metal panel from the sink by placing fingers in holes near the top of the panel, pulling up on panel about a half inch, and lift off panel to set aside. NOTE: *Do not allow pump to run if fresh water tank is empty.*
3. To remove fresh water tank, press gray button on hose, hold the button down, and pull the hose out to disconnect from water tank. Once disconnected, refill the tank.
4. The gray water tank sits behind the fresh water tank. There is nothing to disconnect so slide the tank forward to remove. It's a snug fit so care should be taken in the process. There is a cap for this tank inside the sink. You may wish to cap the tank if you need to walk with it very far to prevent splashing of gray water.
5. When replacing water tanks, remove the cap from the gray water tank if used, put the tanks back into place, set the gray water cap back inside the sink, reconnect the fresh water hose until it clicks into place.
6. Replace front panel.

Please note:

*The hot water heater and water pump are always filled with water. For this reason, the sink **cannot** be unplugged when left out in cold winter weather. Water freezing inside the unit will damage the equipment.*

CaterRent

Food Service Equipment Rental & Sales

260 North 24th Avenue, Minneapolis, MN 55411-2236
Phone: 612-588-1188 Technician: 612-436-1499

Troubleshooting:

1. Always check power to be sure the machine is getting enough to run properly. If you are using an extension cord, eliminate it and plug the machine in directly. Also insure the machine is the ONLY thing in use on this 15 amp circuit.
2. Having trouble? We have an on-call technician available to our rental customers. If after following the above instructions you require assistance with the equipment, call 612-436-1499.